



## Hyundai I30 N (PRE-FACELIFT) Heatshield Installation Instructions

**XFORCE RECOMMENDS AN AUTHORISED PROFESSIONAL TO INSTALL ALL PRODUCTS**


**WARNING:** When working on any vehicle exercise extreme caution. Please allow the vehicles exhaust system to be cool enough to touch before removal. Failing to do so may result in severe burns. If working without a hoist refer to the vehicles manual to check correct lifting specifications. Always wear safety glasses, protective gloves and ensure your working in a safe area. Serious injury or death can occur if the correct safety measures are not followed.

**Attention:** Please read the instructions carefully. XFORCE will only warrant manufacturing faults. This does not extend to damage or breakage due to incorrect fitment.



## Step 1

Shape the heatshield the same as the pic

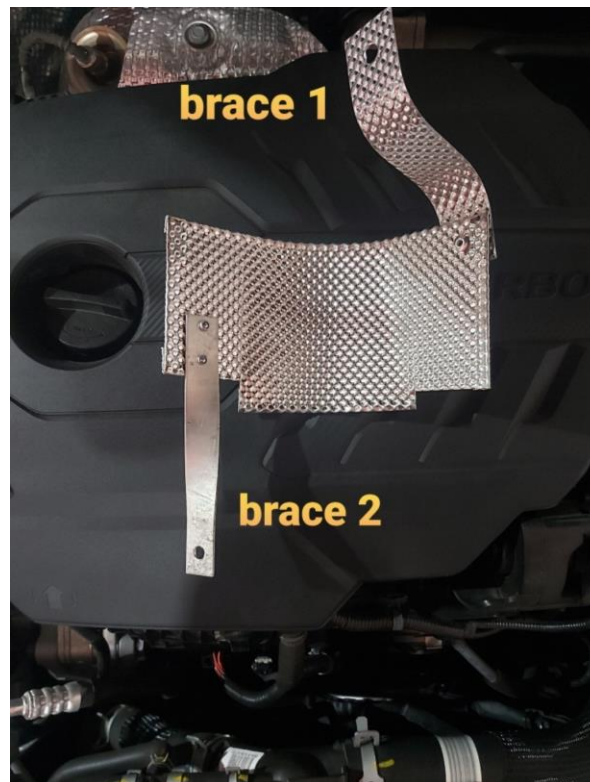



## Step 2


Unbolt the 1x10mm nuts at the Firewall heat shield





## Step 3

Unbolt the 1x10mm nut between the horn and the horn brace

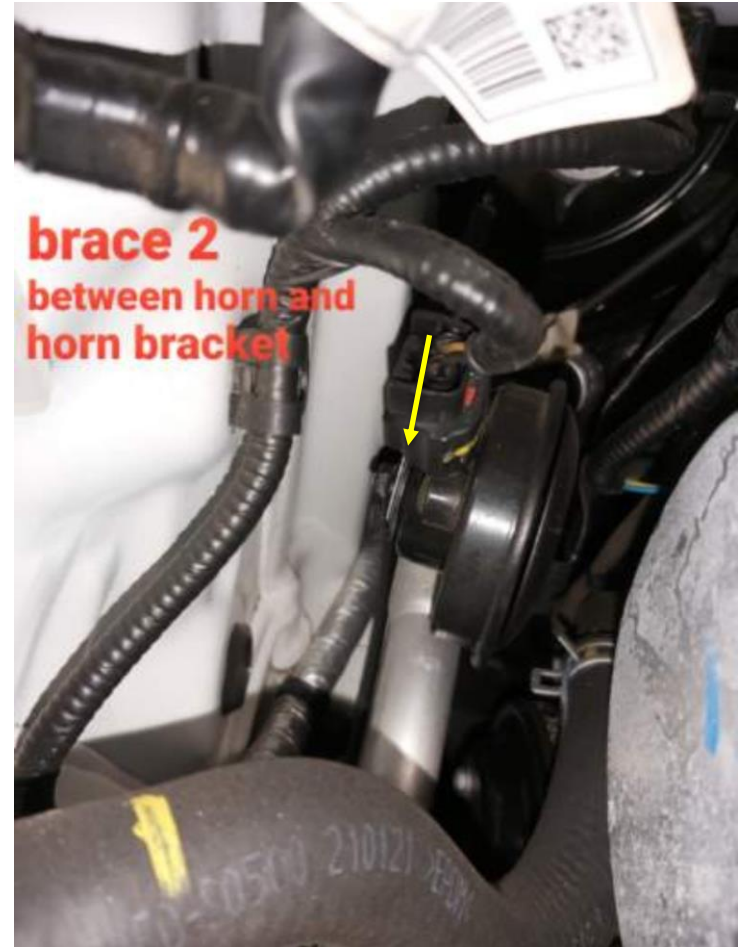



## Step 4

Slide the shield down between the down pipe and the brake master cylinder. Attach brace 1 to the bolt on the firewall and brace 2 between the horn and horn bracket. Tighten the 2 x 10mm nuts

