



**EXTREME
DUTY**


**Engineered durability,
extreme duty 4x4 performance.**



Application: TYP48900-XPB

Fitting Instructions for Toyota Hilux 123 Series 2015 onwards

1. Remove rear tail pipe from vehicle.
2. Remove Engine pipe from vehicle retaining the standard bolts.
3. Remove the standard rubber exhaust hangers.
4. Fit replacement rubber exhaust hangers.
5. Fit engine pipe to vehicle using the previously retained bolts. Refer figure 1.

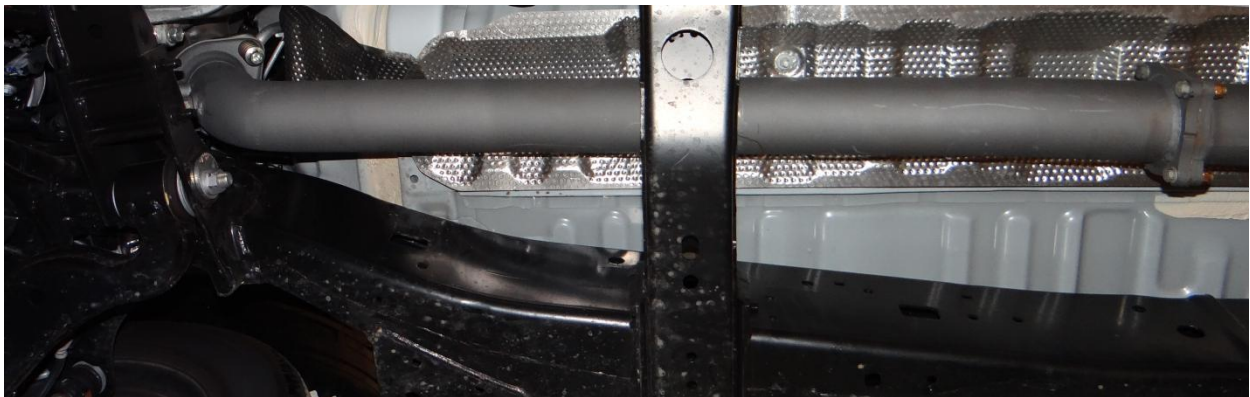

6. Fit o^2 and exhaust temp sensor plugs to engine pipe.
7. Fit front intermediate pipe to engine pipe with four M8x1.25x35mm bolts, eight M8 washers and tighten M8x1.25 lock nuts finger tight.
8. Fit muffler to front intermediate pipe with four M8x1.25x35mm bolts with eight M8 flat washers tighten M8x1.25 lock nuts finger tight.
9. Fit tail pipe to the muffler using four M8x1.25x35mm bolts and eight M8 flat washers tighten M8x1.25 lock nuts finger tight.
10. Tighten all bolts and nuts from front to back of the vehicle and test for leaks

NOTE: WE RECOMMEND FITTING THIS PRODUCT EITHER ON A 4 POST HOIST OR ON THE GROUND

ProMan

A ROCK SOLID REPUTATION

70-84 Miller Street, Epping, Victoria 3076
Phone (+61 3) 8401 8500 Facsimile (+61 3) 9401 4869

Issue Date September 2017



redbackexhausts.com.au